

How to deal with motor stalling

1. Press switch button^⑩ to stop motor, plug out machine to power off ;
2. Take off the lid^①, pour out coffee beans and empty the burr and chamber;
3. Plug in and rotate dial scale^⑥ to coarse grind, press switch button^⑩ to restart the motor.

Safety precautions

- * Do not modify this product without prior authorization;
- * Do not place the product near any fire source;
- * Do not wash the exterior and interior of the product with water;
- * Do not use this product outdoors or in direct sunlight;
- * Do not grind anything other than coffee beans;
- * Do not allow children to touch or operate this product;
- * Do not squeeze, pull, knot or damage the power cord;
- * If the power cord is damaged, in order to avoid the risk of electric shock, it must be replaced by the manufacturer or after-sales service professionals.

Warranty and after sales service

The warranty period is one year from the date of purchase. Under the warranty period the company will provide a full range of warranty services in instances of product failure (excluding any failure due to misuse or inappropriate operation). Proof of purchase is required for any warranty claims. The warranty covers:

1. Free repair of faulty grinders;
2. Free replacement of faulty parts (excluding any consumables such as burr sets);
3. Items stipulated by law.

Exceptions

Product failure or damage in one of the following situations is not covered by the warranty.

1. Product failure caused by unauthorized use;
2. Product failure caused by dismantling the machine without authorization;
3. Product failure caused by failure to operate in accordance with the instructions;
4. Obtain the product by illegal means;
5. Product failure caused by force majeure;
6. Products repaired by unauthorized third party personnel without contacting the company and its authorized dealers.

 
Application and usage

1. Young children should be supervised to ensure that they do not play with the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
4. If the manufacturer wants to limit the use of the appliance to less than the above, this shall be clearly stated in the instructions.

64mm Flat Burr

Coffee Grinder

Instructions

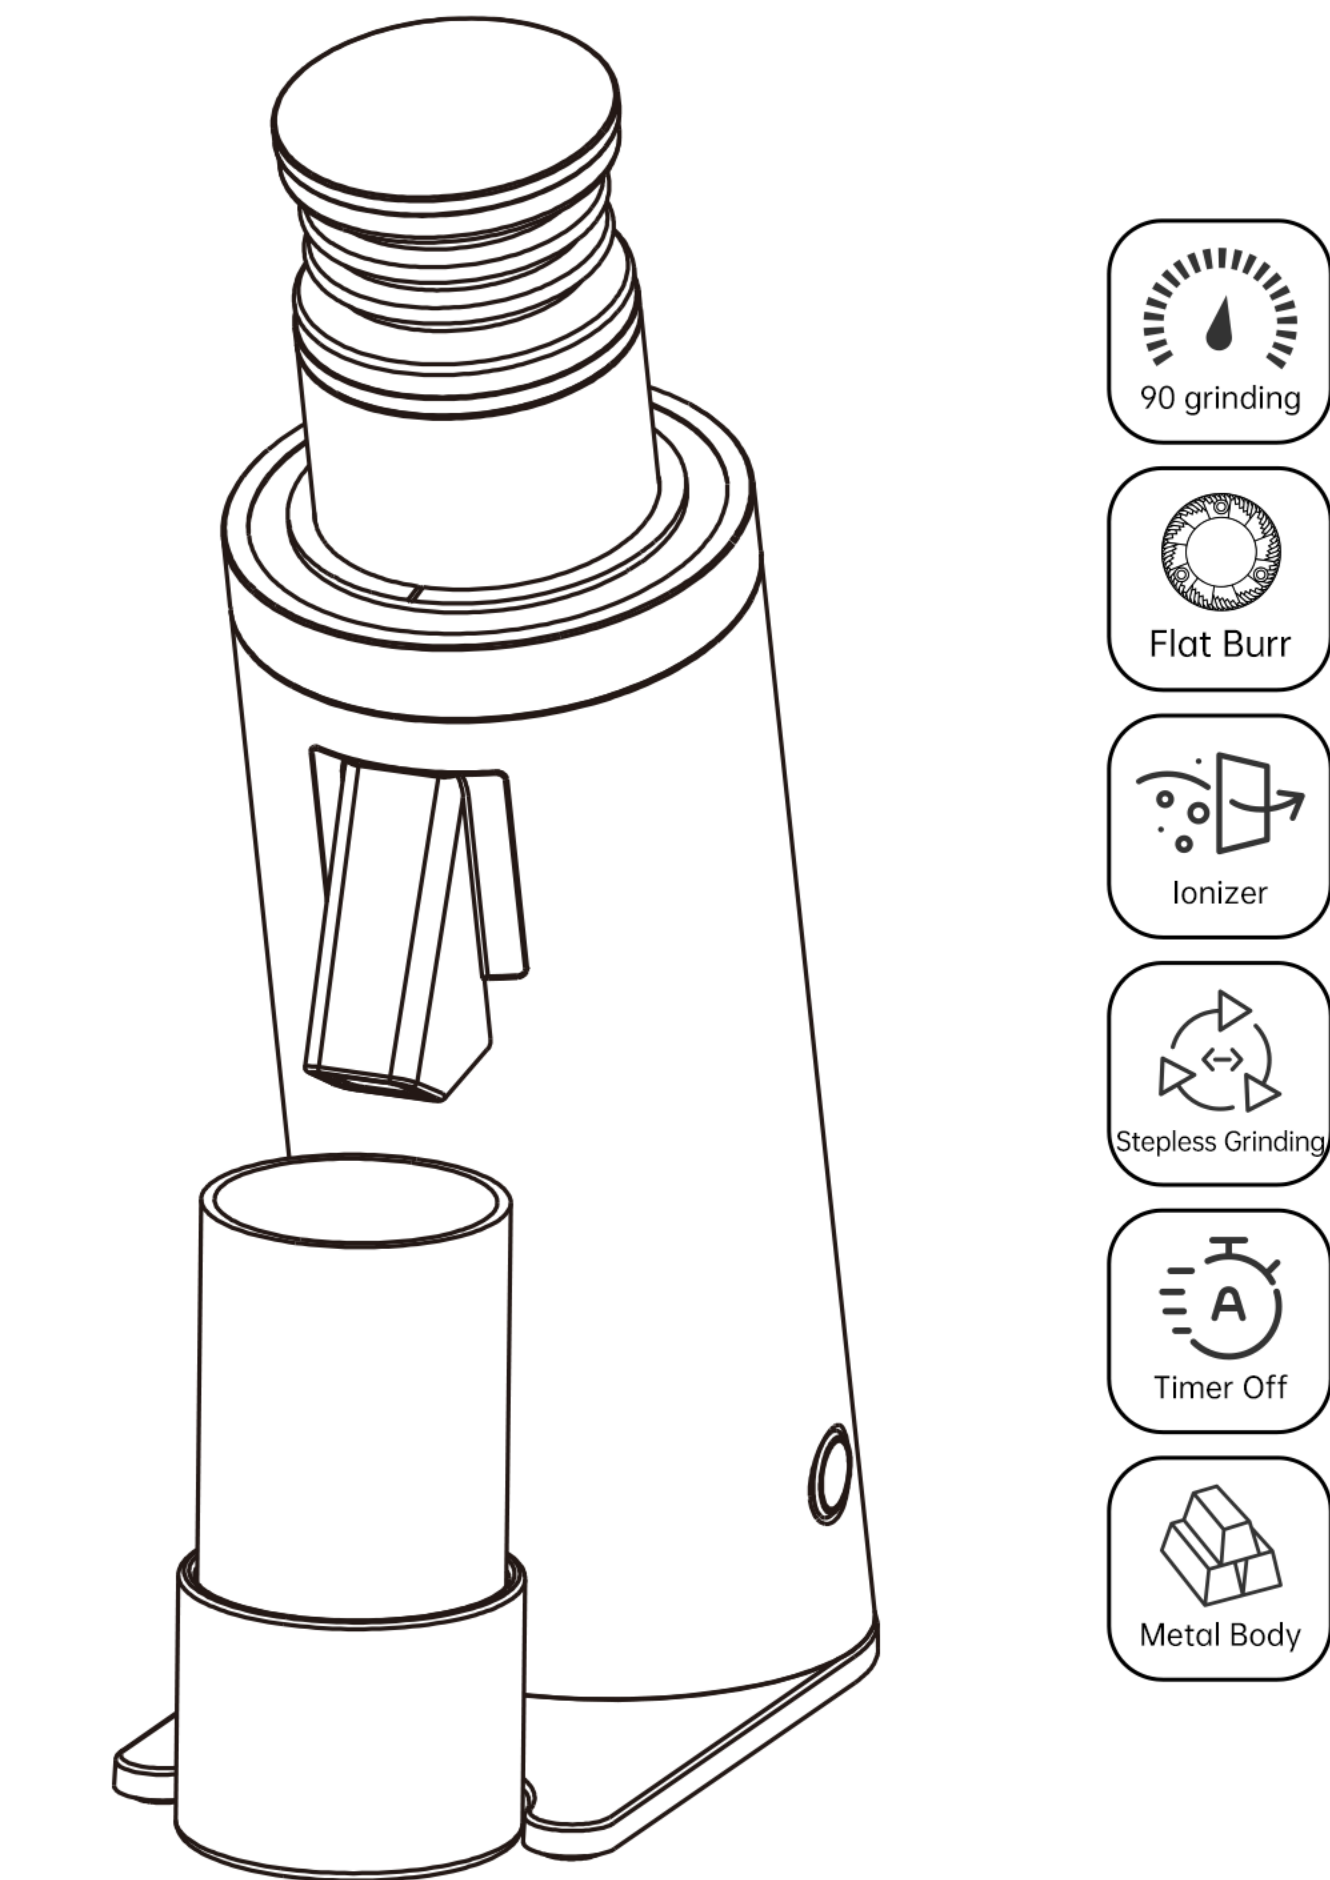

DF64 Air

Single dose coffee grinder

Please read this manual thoroughly before use.
Keep this manual in a safe place for future reference.

Parameters

Item	Coffee grinder
Model	DF64 Air
Item size	L165×W100×H320mm
Carton size	L310×W180×H415mm
N.W	4.4Kg
G.W	5.6Kg
Rated power	210W
Burr	64mm Flat
Capacity of grinder chamber	20g
Capacity of bellows	25g

Accessories

① Bellow hopper

With lid allows for the gentle compression of air to minimizing coffee grinds retention.

② Dosing cup

6063 aluminum alloy with anodizing

③ Cup stand

Wood

④ Cleaning Brush

Clean grinder and workspace



①
Bellow hopper



②
Dosing cup



③
Cup stand

 


④
Cleaning Brush

Grind Range




Presentation

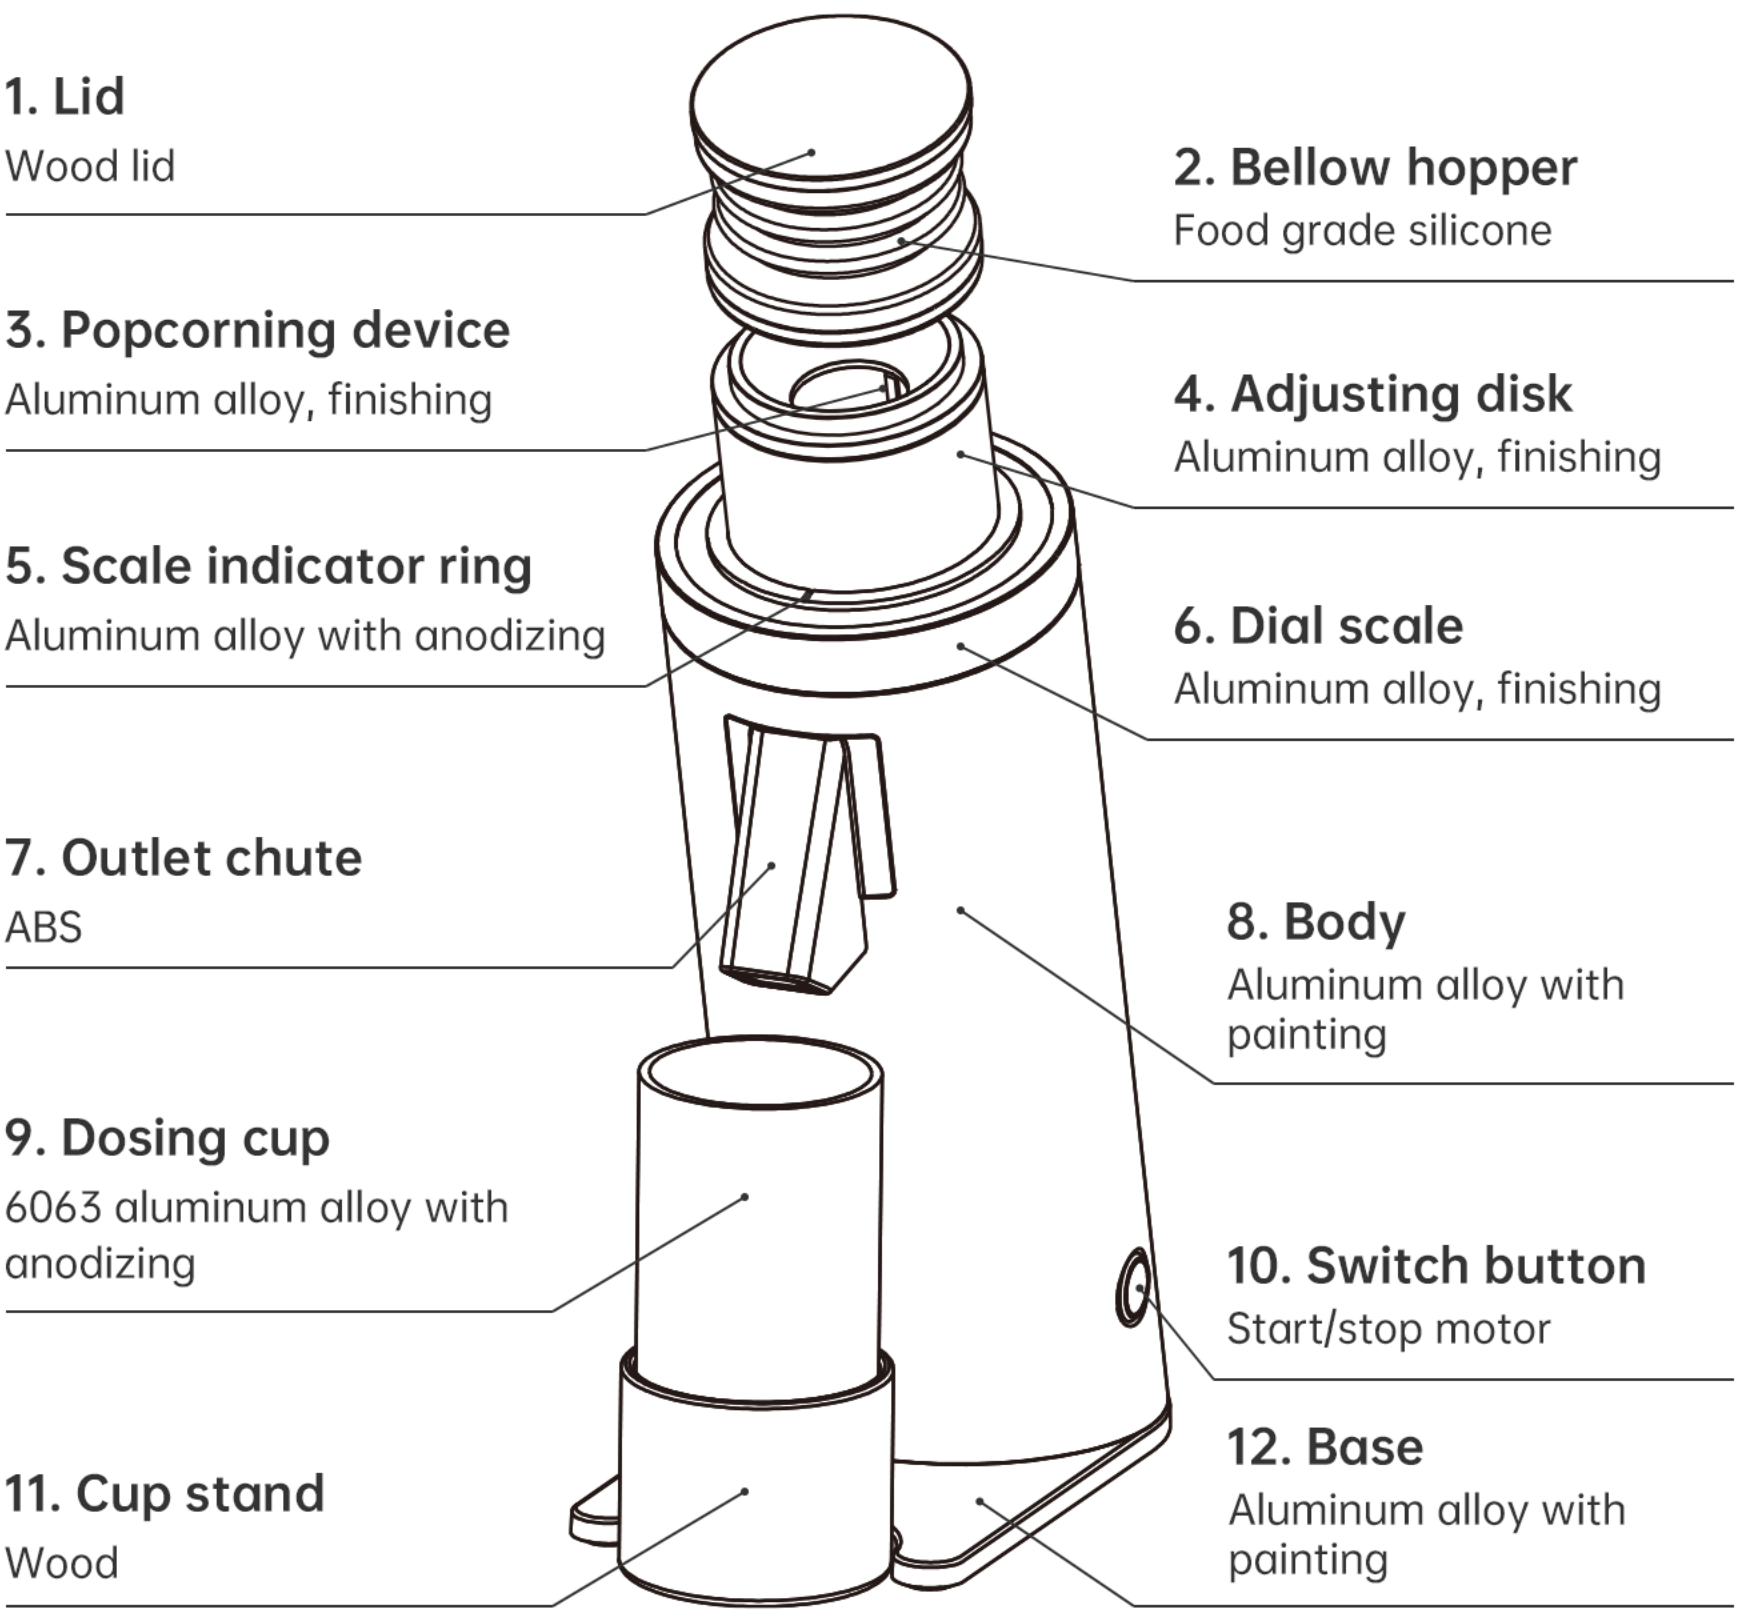

Grind Adjustment

Easy stepless adjustment to any desired grind coarseness.

 Note:
Please adjust the coarseness whilst there are no coffee beans in the grinder, or whilst the grinder motor is running.

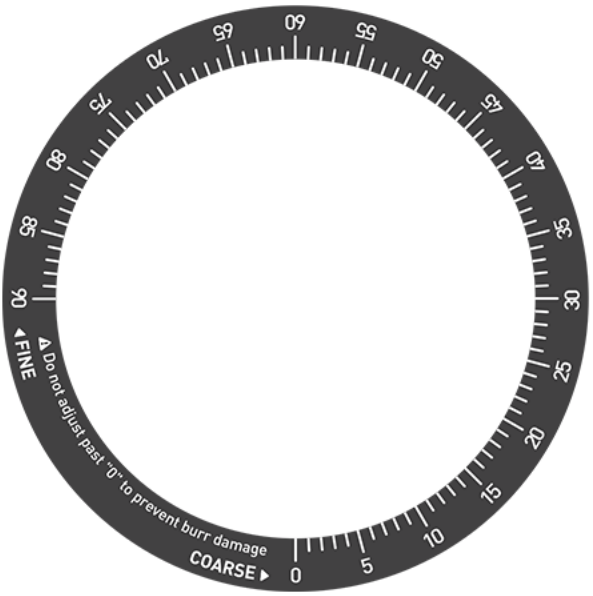

Operating instructions

- Step 1 |** Plug in the grinder and turn on the switch button⑩ on the right, the motor starts running. (Motor will stop running if no coffee bean place in);
- Step 2 |** Open the top lid① and place in coffee beans in the hopper ②, then grinder is working;
- Step 3 |** Upon completion of the grinding process, press the bellows ①② to expel any coffee grinds retention;
- Step 4 |** Motor stop running automatically when grinding process is done. (Can press switch button⑩ to stop motor);
- Step 5 |** Use cleaning brush to clean outlet chute⑦.

Cleaning process

- Step 1 |** Plug in and turn on button⑩ to start motor, press bellow hopper①② to clean the chamber, then press button⑩ to turn off motor and plug out;
- Step 2 |** Use a brush to clean outlet chute⑦. (avoiding contact with your finger due to the presence of the plasma generator pin inside);
- Step 3 |** Rotate the dial scale⑥ anticlockwise to take off the adjustment components (adjusting disc④/scale indicator ring⑤ / dial scale⑥) ;
- Step 4 |** Take off upper burr carrier, use a brush to clean burrs and chamber;
- Step 5 |** Reassemble all the parts in the reverse order.

Grind alignment after cleaning process

- Step 1 |** Upon completion of cleaning process and all parts reassembled, Unscrew the screw behind the scale indicator ring⑤ and then remove the indicator ring⑤;
- Step 2 |** Rotate dial scale⑥ clockwise until can't rotate it, make sure scale"0" align at the outlet chute⑦;
- Step 3 |** Rotate the adjustment disk④ clockwise slowly until hear the sound of burrs touching, then turn the adjustment disk④ counterclockwise by 1-2 grind setting, burr alignment done.
- Step 4 |** Reassemble indicator ring⑤, make sure white mark on indicator ring⑤ align at scale"0", lock screw on indicator ring, grind alignment is done.
- Note:**
1. Grinder can power on **ONLY** after completion of grind alignment, otherwise burr gonna damage.
2. The lubricant of the dial scale needs to be retained, otherwise the screw thread will be damaged.

